

Here is a how-to guide for a fence hanging backboard!

Dimensions: 8x12 Feet

Supplies:

- Qty 3 1/2" 4x8 treated plywood
- Qty 5 2x4x12 treated lumber
- Qty 10 Chain link fence adjustable wood adaptor
  - Might need a pack of 1/4" x 2" galvanized carriage bolt
  - Model Number: 1715515




- Qty 1 lb 1 5/8" deck screws
- Qty 1 gal Outdoor Paint/Primer

Instructions:

- 1) Use the chain link fence adjustable wood adaptor to attach 2x4x12 lumber to the fence
  - a) See diagram below for measurements
- 2) Using other people/jacks attach the 1/2" 4x8 to the previously installed boards using the deck screws.
- 3) Paint a line 36 inches from the ground to signify the net.
- 4) Wait 1 year for treated lumber to dry before painting the backboard in its entirety.

# Back side

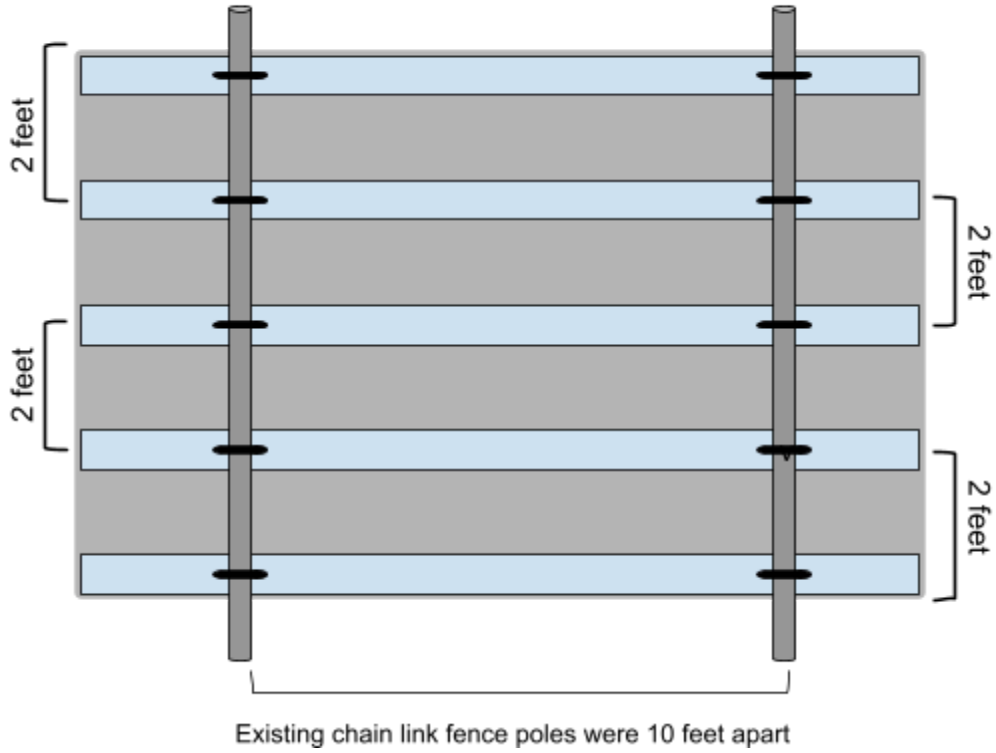

# Front side

